



# Electric Chafing Dish

## Instruction Manual



Model: ZCK100S

Please read this instruction manual carefully before operating this equipment

## 1.Safety Tips



Read this instruction manual before using and keep them available at all times!

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with the device.
- Preserve this manual safely. When passing on/selling the device to a third party, the manuals must be handed over along with the device.
- Every person using the device must act in accordance to the manuals and under consideration of the safety advice. o The device is to be used indoors only.

## 2.Operation instruction

Specification:

Capacity : 1/1x100 GN container

Voltage : 220V-240V/50HZ 1600W

### Operating and Maintenance:

This machine to warm the food or soup, and the follow is instruction and features:

#### 1) Switch and indicate light

The switch designed six locations: "0" - "5", when the switch turn to "1", the machine start to work, and the indicate light will on, when the switch turn to "0", the power will off and the indicate light also will off.

#### 2) Thermostat and indicate light of working.

The thermostat to control the temperature of the water in the water tank, when turn the switch to "1", the heating element will work and the light will on.

When the temperature of water reach the set, the switch will turn off, the indicate light will off at same time; when the temperature down about 10 °C of the set, the switch will turn on again, and the indicate light will on. This machine will work automatic and will keep the food at the moderate temperature.

When turn the thermostat to the max, the heating element will heat the water to 90°C (±10°C) around 20 minutes, then will some steam come out from the edge of food pan.


This machine with the protection of over-heating function, if the temperature of heating element over 118°C, the protection of over-heating will cut off the power, and when the temperature of heating element down to the safety limitor, the machine auto to work again.

#### 3) Water limited line

Before operating, please add suitable water to the water tank, the water tank with marks: Mini and Max.

### Caution:

- 1) This machine just to warm food, not to cook food.
- 2) Can not put this machine into the water, it's dangerous and will to damage the machine.
- 3) Please put this machine at the flat surface, no move the machine when working.
- 4) Ensure unit is unplugged when not in use, when filling and when being cleaned
- 7) The machine must be earthed and can not work outside.
- 8) If the machine with problem, please inquiry the distributor.

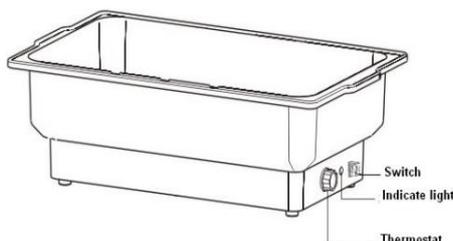

### **3.Cleaning**

- Clean the device regularly!
- Wipe off the water container and lid holder thoroughly with a mild cleaning agent and a soft, damp cloth, dry with a soft cloth.
- Clean the Gastronorm containers, the lid with warm water and a mild cleaning agent. Rinse off with clean water and dry with a soft cloth.
- Use soft cloth only and make sure you never use any kind of abrasive agents, which could scratch the surface. o After the cleaning procedure you should use a soft and dry cloth to wipe dry and polish the surface.
- Before storing the device in a dry place you should make sure it has been cleaned properly.
- When using the device often and intensively the bottom of the water container should be cleaned regularly. Herefore you may use vinegar or a special descaling agent.

### **4.Waste disposal**

#### **Discarding old devices**

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.

#### **WARNING!**

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.

#### **CAUTION!**

For the disposal of the device please consider and act according to the national and local rules and regulations.

## **5.Warranty**

iMetos warrants to the original purchaser of every new product, under normal and proper use and maintenance service as specified by iMetos and upon proper installation and start-up in accordance with the instruction packet supplied with each unit. iMetos' obligation under this warranty is limited to a period of one (1) year from the date of original installation.

### **WARRANTY CLAIMS**

All claims for parts must be made directly through iMetos. All claims should include:

Personal Details:

Your name:

Your company:

Address:

Email:

Phone:

Products Details:

Model number:

Serial number of the product:

Date of purchase:

Proof of purchase :

Pertinent information supporting the existence of the alleged defect.(Such as picture etc.)

Please send the above information to [services@imettos.co.uk](mailto:services@imettos.co.uk)

Our warranty departments will according to the actual situation and reply you within 24hours.



iMettoS Limited

[www.imettos.co.uk](http://www.imettos.co.uk)